


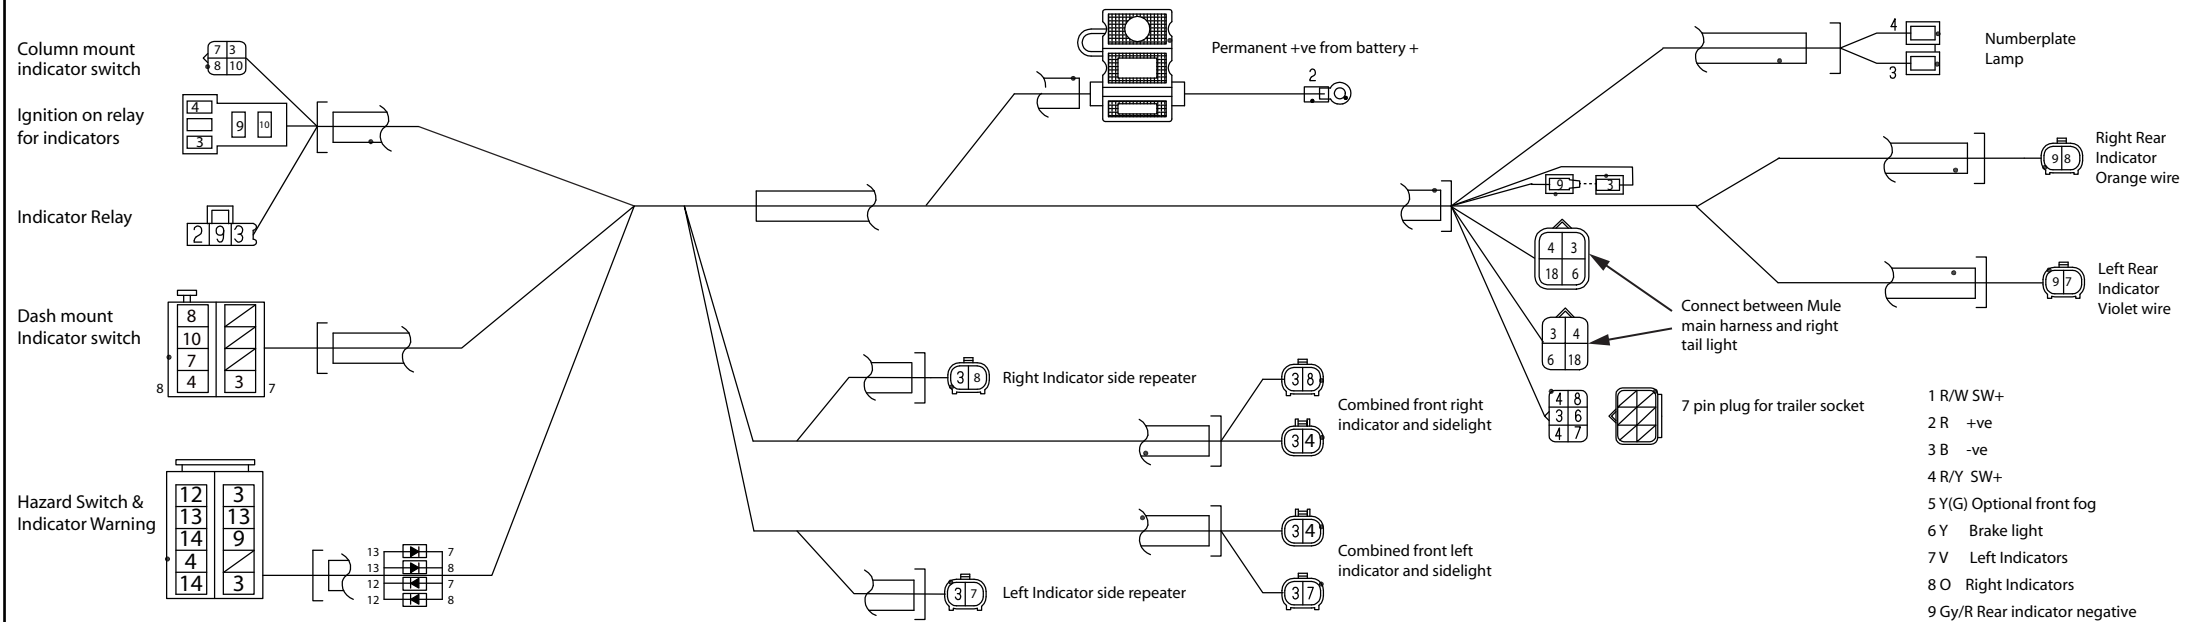

Mule MX Lighting Kit Fitting Instructions

LED lights, switches and cable harness

- Drill 36mm hole in the headlight blanking plate for the inner headlight for combined white position light and amber indicator - 36mm lamp with 2 plugs fitted
- Drill 20mm hole above wheelarch for indicator side repeater - 20mm lamp
- Drill 36mm hole below rear light for rear indicator - 36mm lamp with 1 plug fitted

Remove dash lower cover

Mount indicator switch onto steering column and hazard switch into dash next to horn push

Remove centre tunnel cover

Lay harness into place following OEM harness

Route purple wires to the left of the vehicle and orange to the right.

Connect purple to left indicator, orange to right indicator and blue to position light

Plug 2 relays into harness

Connect switches to harness

Fit numberplate lamp onto numberplate

Attach 7 pin socket to harness and mount on Mule (bracket not supplied)

Power connection

Connect 4 pin plugs between main Mule harness and right Mule rear light

Connect fused wire to battery +

Test lights. Indicators should flash with ignition on
Hazards should flash with ignition on and off
Hazard switch should only operate with ignition on.
Attach cable ties to hold harness in place
Refit tunnel cover.