


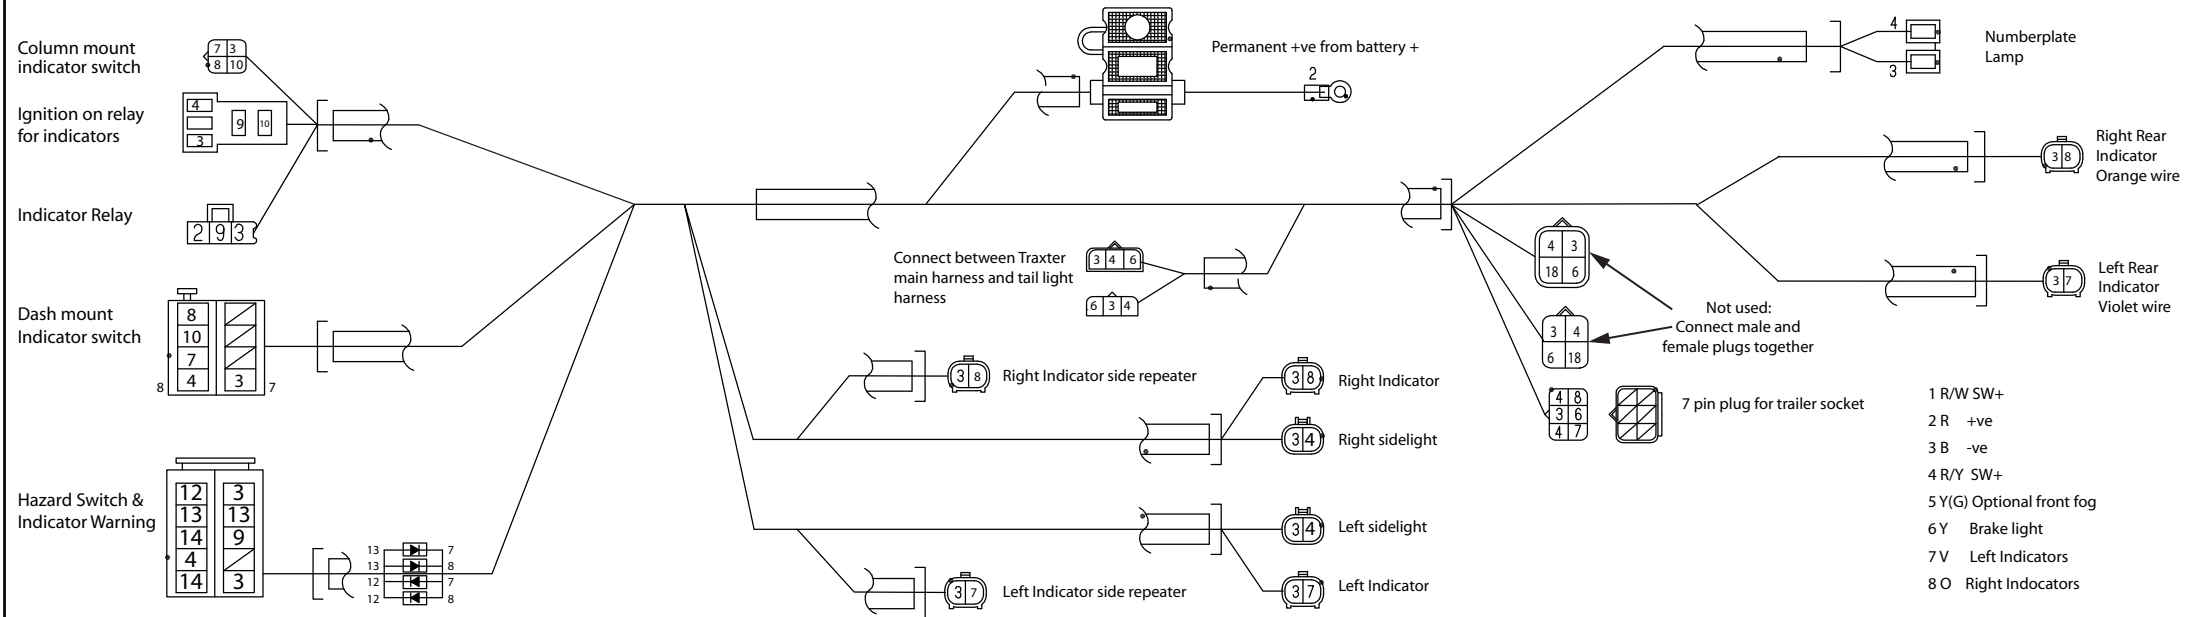

Traxter Lighting Kit Fitting Instructions

LED lights, switches and cable harness

- Drill 20mm holes in the front bumper / bonnet for white position light and amber indicator
- Drill 20mm hole above wheelarch for indicator side repeater
- Drill 36mm hole below rear light for rear indicator

Remove dash lower cover

Mount indicator switch and hazard switch into centre dash switch blanking plates move other switches as necessary so the indicator switch is as close as possible to the steering column

Remove centre tunnel cover

Lay harness into place following OEM harness

Route purple wires to the left of the vehicle and orange to the right.

Connect purple to left indicator, orange to right indicator and blue to position light

Plug 2 relays into harness

Connect switches to harness

Fit numberplate lamp onto numberplate

Attach 7 pin socket to harness and mount on Traxter (bracket not supplied)

Power connection

Connect 3 pin plugs between main Traxter harness and Traxter rear light harness above right rear wheel

Connect fused wire to battery +

Test lights. Indicators should flash with ignition on
Hazards should flash with ignition on and off
Hazard switch should only operate with ignition on.
Attach cable ties to hold harness in place
Refit tunnel cover.